## Tekmand 控台通过 Artnet 连接 Wysiwyg

## 设置 Tekmand

1. 进入 Setup->Network->Tekmand Network Control: 点击 Join Session(加入工作组)使控台 变为主控,如图:

Tekm	nand-Net Control (C	Maste	r X				
	Sessions			Stations			
Id	Name	IP	IP Status		Version	Туре	
	Unconnecte	d 192.168.4.88	Master	FineartXW	3.1.1.13	OnPC(Windows 7)	
6	eeeeeee						
7	33ddd						
32	newlib						
			Chatian ID.		100100400		
Session Id:		1	Station	IP:	192108488		
Session Name:		DDDEE	Station	Name:	HNEALTAW		
Session Password:			Station Master Prio.:		Normal		
Set IP Address:		192.168.4.88	Station :	Invitation:	0 Enabled	Disabled	
Ļ	oin Leave		Destroy	Invite	Dismiss		
Se	ssion Session		Session	Station	Station		

2. 进入 Setup -> Network -> DMX Protocols -> Artnet: 激活 Active 列并启用"Artnet Output Active",如图:

Setup/Network/DMX Protocols								×	
Artnet				Streaming ACN					
Active	Mode	LocalStart	Amount	ExternStart	Delay	Artnet2 (Experimental)			Artnet
on	Output		24						Active
New									
									Artnet Input Active

Localstart: 第一条要发送的 Dmx 线路。 Amount: 要发送的 Dmx 线路数量。 ExternStart: 对应 Artnet 的第一个接入点。

注意: Artnet 输出是接控台的第二个网口。

## 配置 Wysiwyg

1. 在开始菜单中 Wysiwyg 目录找到 "WYSIWYG ArtNet Configuration Utility",打开如图:



- 2. 点击 OK, 然后打开 WYSIWYG.
- 3. 选择 Live 模式, 添加 Artnet 设备: Live -> Device Manager... -> New, 如图:

Library Selection		? X
Library Selection ↓ ♪ ♪ Search path: Connectrer\Artistic Licence ← → ↑ ↑ Connectivity Networks Manufacturer Artistic Li Artistic Licence Art-Net	Appearance Version Data	Symbol View Plan Side OFront
		Insert Close

4. 选择 "Artistic Licence Art-Net", 然后点击 Insert 按钮.

5. 在 Device Manager 窗口,找到刚刚添加的 Artnet 设备,选择并点击 Properties 按钮, 打 开如图:

rtistic Licence	Art-Net -	Proper	tie	s	?	X		
Console								
Manufactu	rer							
Protocol	Protocol Art-Net 👻							
Model : Artistic Licence Art-Net								
Name :	Artistic	rtistic Licence Art-Net						
Address								
Ports		Univ		Open	Chans			
Output (	)	A						
Output 3	1	В	•					
Output 2	2	(None>						
Output 3	3	(None>						
Output «	4	(None>						
Output S	5	<none></none>						
Output 6	3	<none></none>						
Output 7	7	(None>						
Output 8	3	(None>						
Output 9	9	(None>						
Output 1	10	(None>						
Output 1	11	(None>						
Output 1	12	(None>				_		
Outnut	13	<none></none>						

- 6. 设置对应的输出口线路, 然后点击 Close 按钮.
- 7. 完成后点击 Connect 铵钮连接.

注意: 电脑的 IP 地址必须是 2.xxx.xxx (如: 2.168.4.100), 子网掩码: 255.0.0.0